

HEATING AND COOKING

Central Heating and Hot Water System	28
Appliances	29

Heating and Cooking

BEFORE USING APPLIANCES PLEASE READ THE USER INSTRUCTIONS SUPPLIED.

NOTE: In the interest of safety, replacement parts for an appliance must conform to the appliance manufacturer's specifications and should be fitted only by them or their authorised agent.

CENTRAL HEATING AND HOT WATER SYSTEM

PLEASE READ THE USER INSTRUCTIONS.

CAUTION: - The boiler can produce water at over 80°C when in central heating mode. If you run a hot tap when the boiler has been heating the radiators, the initial flow through the hot tap could be very hot. DO NOT PLACE YOUR HANDS under the tap or use the shower until the initial flow has passed.

The thermal grade of your holiday home is Grade 2 with Central Heating & Grade 1 Without Central Heating:-

The definition of a Grade 2: A caravan holiday home, including windows, doors and

roof lights in which the average thermal transmittance (U) of the elements shall not exceed 1,7 W/(m².K).

An average temperature difference of at least 20°C between inside and outside temperatures shall be achieved in lounge, dining room and kitchen, when the outside temperature is 0°C

The definition of a Grade 1: A caravan holiday home, including windows, doors and roof lights in which the average thermal transmittance (U) of the elements shall not exceed 1,7 W/(m².K).

There is no heating for this grade

Radiator valves

Thermostatic radiator valves (TRV) are fitted to all radiators except the bathroom adjacent to the boiler, to control the room temperature.

Heating and Cooking

Appliances

GAS OVEN AND GRILL

Please read the user instructions provided before using the oven and grill.

GAS HOB

Please read the user instructions provided before using the hob.

COOKER HOOD

Please read the user instructions provided before operating or changing the filter.

FRIDGE/FREEZER

Please read the user instructions provided before using the fridge/freezer.

WARNING:

Like the majority of domestic fridge/freezers sold in the UK your fridge/freezer is designed to operate within an ambient temperature range of 16°C and 32°C. If the ambient temperature falls below 16°C the appliance compressor will not operate as often resulting in the temperature in the freezer compartment rising. If this is for an extended period of time there is a possibility of some of the freezer contents defrosting. If the temperature drops below 3°C the appliance will not operate at all and the freezer compartment will defrost. (Unless the ambient temperature is below -9°C). Therefore, if the holiday home is left unoccupied and without heating, and the ambient temperature within the van is likely to fall below 3°C, we would recommend that the fridge/freezer is emptied, cleaned and switched off until such time as the ambient temperature rises to within the normal operating range.

MICROWAVE OVEN (IF FITTED)

Please read the user instructions provided before using the microwave.

ELECTRICAL LOUNGE FIRE/HEATER (IF FITTED) PLEASE READ USER INSTRUCTIONS PROVIDED

WARNING: Before undertaking any maintenance or cleaning, disconnect from the power supply. Only competent persons should service/repair appliances.

NOTE:- To prevent scratching of the front screen, this appliance should be cleaned with soapy water and a damp cloth only. Due to the nature of stainless steel it picks up finger marks easily, the trim should always be cleaned with a cleaner that is suitable for stainless steel.

FOR LAMP REPLACEMENT AND FAULT FINDING PLEASE CONSULT THE USER INSTRUCTIONS.

GAS FIRE (IF FITTED)

Before igniting your fire read the user instructions.

DISHWASHER (IF FITTED)

Please read user instructions before using the dishwasher.

Heating and Cooking