

SWIFT GROUP

Dunswell Road
Cottingham
East Yorkshire
HU16 4JX

Tel: 01482 875740
Fax: 01482 840082
Email: enquiry@swiftgroup.co.uk

Swift Group Quick Start Guide

Kon-tiki Dynamic

FIND OUT MORE AT SWIFTGROUP.CO.UK



Brochure



Layouts



Dealer



Video



Social

Issued Jan 2019
1434688



Contents


POWER UP MOTORHOME

Power up motorhome	1
Prime the cold water system.	2
Connect gas to motorhome	3
Operate fridge	4
Operate Alde central heating.	5

NB. If after following any of the steps in this guide a problem occurs, please first consult your main handbook for further information, and if problems still persist contact your supplying dealer.

The main motorhome owners handbook can be found on the Swift Group website:

www.swiftgroup.co.uk/owners/handbooks

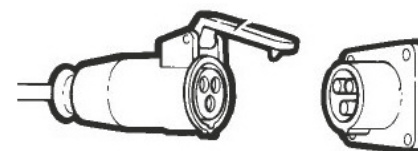

Charger




HEATING/HOT WATER



1. Plug 230v supply into motorhome then into site supply (if appropriate). For information on using the generator, see main handbook.
2. Press Black isolator button on front of power supply unit to turn system on.
3. Press green button on power supply unit to switch on charger.
4. Press Yellow button on power supply unit to switch on 230v supply to heating system.
5. If an inverter is fitted, ensure this is turned on. See main handbook for details.
6. Press power button on control panel (above entrance door).

PRIME THE COLD WATER SYSTEM

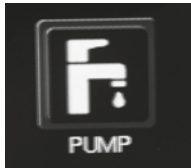

1. Ensure the fresh water tank drain valve is closed - the valve is normally closed, unless the fresh tank icon on the control panel water page is flashing. (Flashing indicates valve open).

Locate and open the fresh water tank filling cap, and using a food grade hose fill the fresh water tank via this water inlet.

2. Locate safety/drain valve close to Alde heating appliance, and ensure handle is in horizontal position (e).



Close all taps except kitchen sink tap, which should be set to 'hot' position.

3. Press pump button on control panel, and wait until water is flowing from kitchen tap. (this may take a few minutes).

4. Set kitchen tap to 'cold' and again wait, until water is flowing cleanly.

At vanity and shower taps / mixers, open to hot and then to cold until again water is flowing cleanly at each outlet.

CONNECT GAS TO MOTORHOME

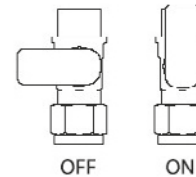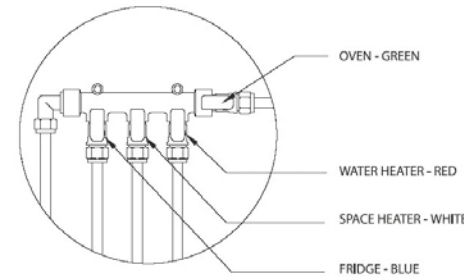

1. Your motorhome will be supplied with gas in the on-board tank. For details of re-filling the tank, see main handbook.

Open the skirt locker and locate the gas regulator. This is the 'Crash Sensor' type, follow the steps described on the adjacent Yellow label to re-set the regulator safety features.

To enable the gas supply, locate the control panel and level gauge within the upper kitchen cupboard. Press the power button, and the level gauge will illuminate, showing the amount of gas in the tank. Simultaneously a valve will open on the tank to allow the use of gas.


2. Locate the gas isolation valves, which are on a manifold contained within the lower kitchen unit of the motorhome, and below the fridge freezer.

3. Turn each tap to the 'ON' position

4. Move to hob/oven. Open glass lid fully. Press igniter on hob, turn one burner control to 'ON' position, and depress that control. After a short while burner should light.

Gas should now be available at all appliances.

OPERATE FRIDGE

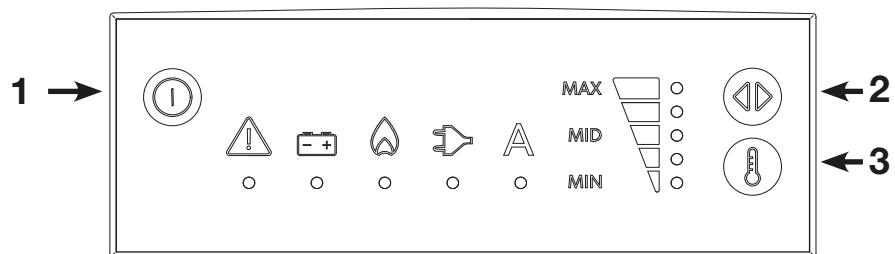

This guide details basic settings only, for further details, please see main handbook and links to external sources for further information.


TURN ON


Press the power button (1) for approx. one second to switch on the fridge. Pressing and holding the button (1) for approx. one second again, will switch off the fridge.

Choose energy source.

Press button (2) to move between the energy source choices. From left to right these are:

 12v (from towing vehicle)

 Gas

 230v (mains hook up)

 Automatic selection of available source


An LED will illuminate below the corresponding symbol to confirm the chosen energy source.

Choose temperature:

Press button (3) to choose a temperature. With all indicators illuminated, maximum cooling will occur.

After a short time the fridge will begin to operate. If a problem occurs (for instance no gas when gas energy source is selected), then the LED below the warning symbol will illuminate. Please note; allow the refrigerator to run for at least two hours, or ideally run the refrigerator over night, to cool to a suitable temperature for storage of food.




OPERATE ALDE CENTRAL HEATING SYSTEM

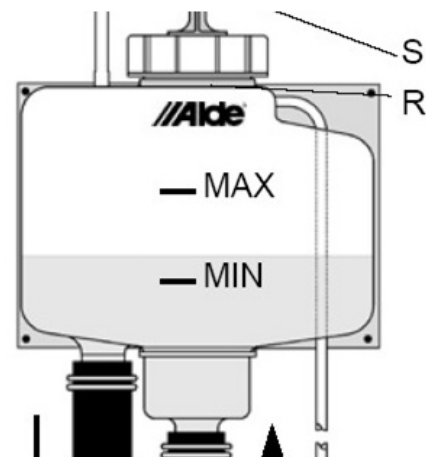

The Alde 3020HE central heating system can provide hot water and room heating, from gas and/or mains (230v) electric energy sources, and from an engine heat exchanger. The room heating can be used with or without water in the heater - if water is present, then the water will also be heated to an unspecified temperature..

Before using the central heating system check that the level of 'glycol' fluid which is used to heat the radiators, is between the min and max levels on the header tank.

The Alde control panel is located near the entrance door, and is used to select energy source and water / room heating operations. This guide details basic settings only, for further details, and use of the Swift Command system to control heating, please see main handbook and links to external sources for further information.

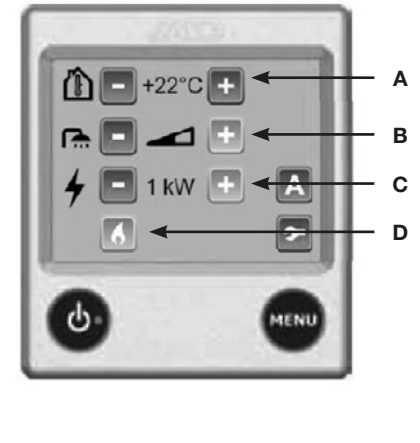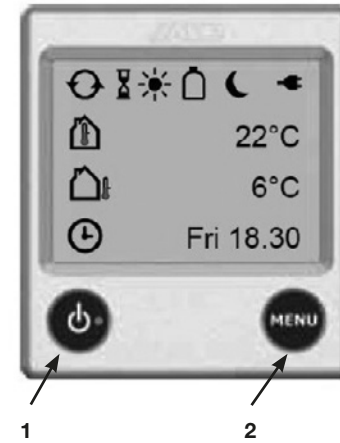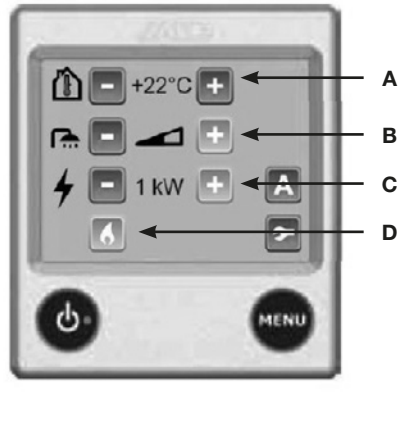

Turn heating system ON:

To turn the panel on, press the power button (1). The heating system will return to previously used settings, until adjustments are made. Press the menu button (2) to display a screen showing heating system options. Please note after a short time the display will switch back from the menu settings to the standby screen, if no further areas of the screen are touched.

Pressing and holding the power button (1) will switch the heating OFF.

Choose required room temperature

Using the touch screen display, press the + and - buttons on row A to select preferred room temperature. The preferred room temperature is displayed between the + and - buttons.

Choose alternate room temperature Zonal Control

This feature allows the Alde heating system to measure actual room temperature from one of two locations, to suit how the motorhome is being used:

Locate the switch and second thermostat position at the rear of the motorhome.



Typical 2nd thermostat and switch arrangement

With the switch OFF, room temperature will be measured by the Alde controller above the entrance door.

With the switch ON, room temperature will be measured by the second thermostat position, at the rear of the motorhome.

Choose water heating settings

Using the + and - buttons on row B select preferred water temperature. The bar chart between the + and - buttons shows the temperature selected, from no preferred temperature (empty) to high temperature or boost (fully Black).

Choose energy settings - Electric operation

Using the + and - buttons on row C select 1kw, 2kw or 3kw electric elements.

Choose energy settings - Gas operation

Press the flame button (D) to turn on (Green) or OFF (Blue) the gas operation. It is possible to combine differing levels of 230v operation, with gas operation.

Choose energy settings - Heat Exchanger

When the motorhome engine is running, heat from the engine will automatically be available to the Alde system.

No other setting changes are required though the Alde system will simultaneously use Electric and Gas operation, if these are also selected and supplies are available.

